

F3 Extended Tank Protection - Paint Protection Film

Thoroughly clean application surface area with 70% rubbing alcohol and paper towel.
Mix 3 corn size drops of Johnsons Baby Shampoo and 32 oz of water in a spray bottle.
This is your installation mix.

TEST FIT & ALIGN: Carefully separate the 3 pieces of your kit. With the backing paper on, position the center piece just above the leading edge of the seat.

Use masking tape to secure the center panel in position. Next align the Left and Right side pieces to be sure these will fall into place once applied. If fitment looks correct remove the Left & Right pieces.

NOTE: Be sure your hands are very clean before transferring paint protection pieces off liner to application surface. Wet your hands & fingers with your water mix solution before you peel pieces from the page.

Next: Wet your application surface area on the tank.


Install the center piece of the kit **FIRST**. *Making a mark to reference the top and bottom center notch will be helpful when positioning the panel.* Wet your application surface area on the tank. Peel off the backing paper of the center panel and thoroughly wet it as well. Then position pattern on the machine using the reference marks. Make sure the pattern is in the exact center of that tank when installing.

Spray the top of the part then squeegee in overlapping strokes from the center of the panel to the outsides in all directions until water has been pushed out from under the part. **NEXT**, carefully align the Left panel using the leading edge of the Center panel as your guide for placement. *They are supposed to butt up against one another with little to no gap.* This may require multiple tries to get the part aligned just so. You can re wet the surface as many times as needed when installing. Repeat same process on Right side to complete the installation.

Once applied, allow 24hrs for the film to cure before riding. Water bubbles will breath out over time. Allow up to 2 weeks for complete cure to the application surface. Please call with any questions before application if you are unsure how to install. Call or Text 814-450-1923



Left Center Right

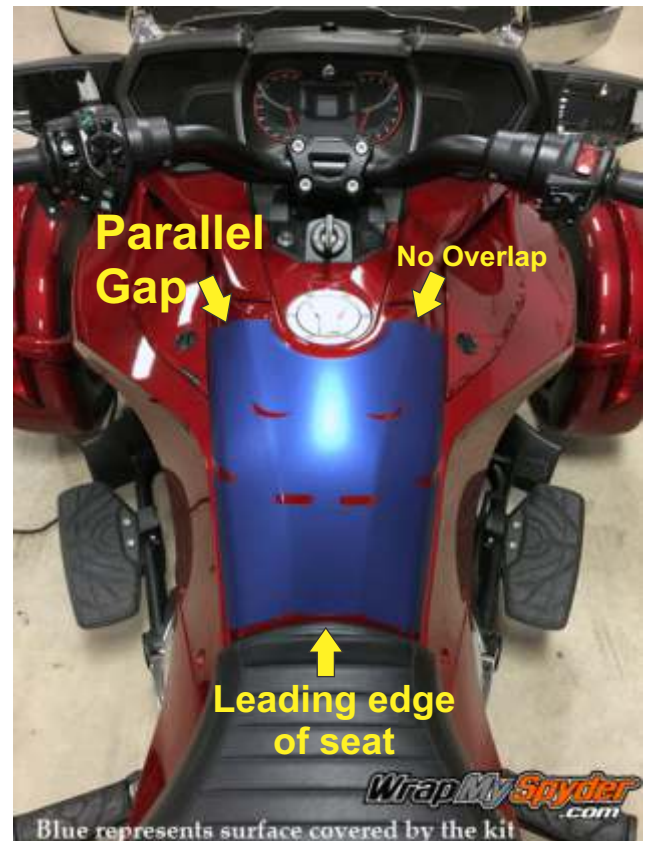

Proper Positioning

WrapMySpyder
-COM